



# Game Boy Color LCD Ribbon Cable Replacement

This guide shows how to disconnect the LCD Ribbon cable so other components may be safely removed.

Written By: Nick Katsantonos



## INTRODUCTION

Removing the ribbon cable provides unhindered access to the inner workings of the Game Boy Color.

---

### TOOLS:

- [Spudger](#) (1)
  - [Tri-point Y0 Screwdriver](#) (1)
-

## Step 1 — Battery



- Locate the battery compartment on the back of the Game Boy Color.
- Push down on the tab and hinge the cover downwards and outwards to remove the battery cover.


## Step 2



- Remove the batteries from the battery compartment.




## Step 3 — Back Housing

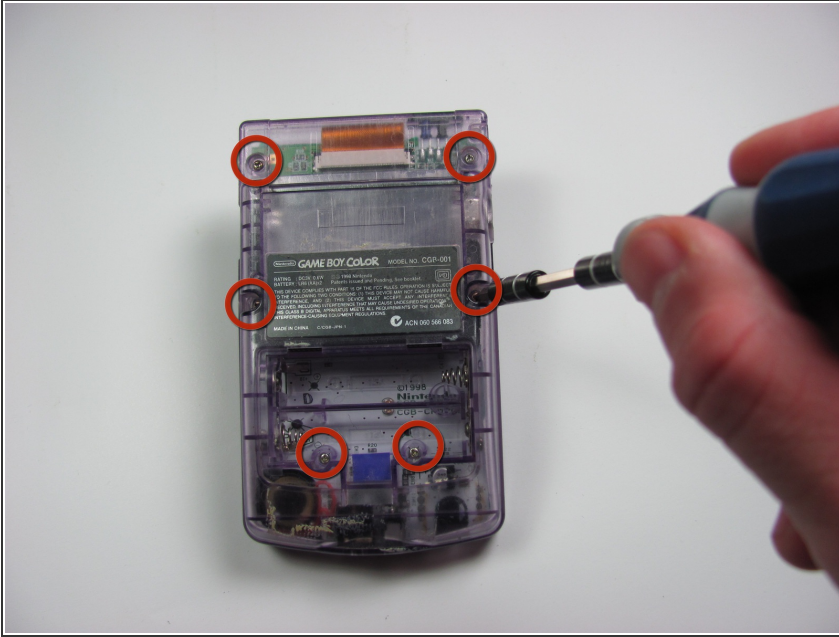


- Using a Y1 screwdriver, remove the six screws on the back of the device as pictured. The bottom two screws are located inside of the battery compartment.

## Step 4

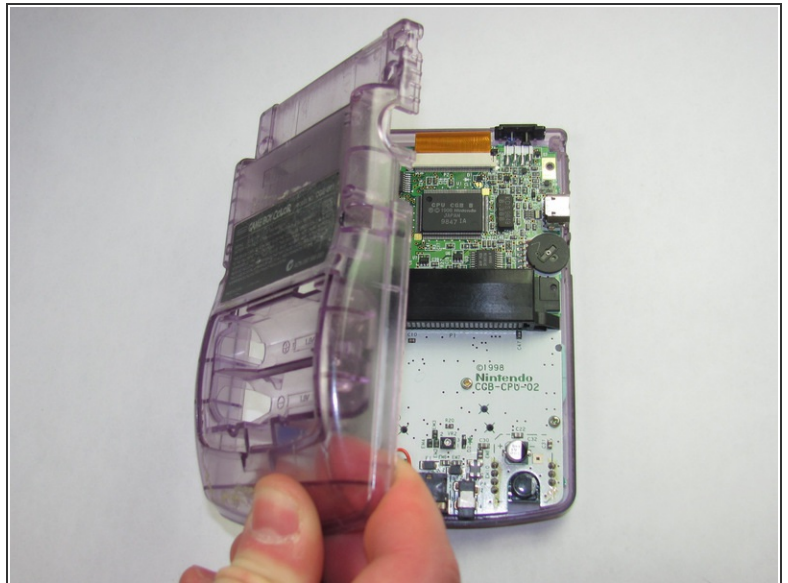

- Gently lift and separate the back housing from the rest of the device. Now you've got the back housing out!

## Step 5 — LCD Ribbon Cable

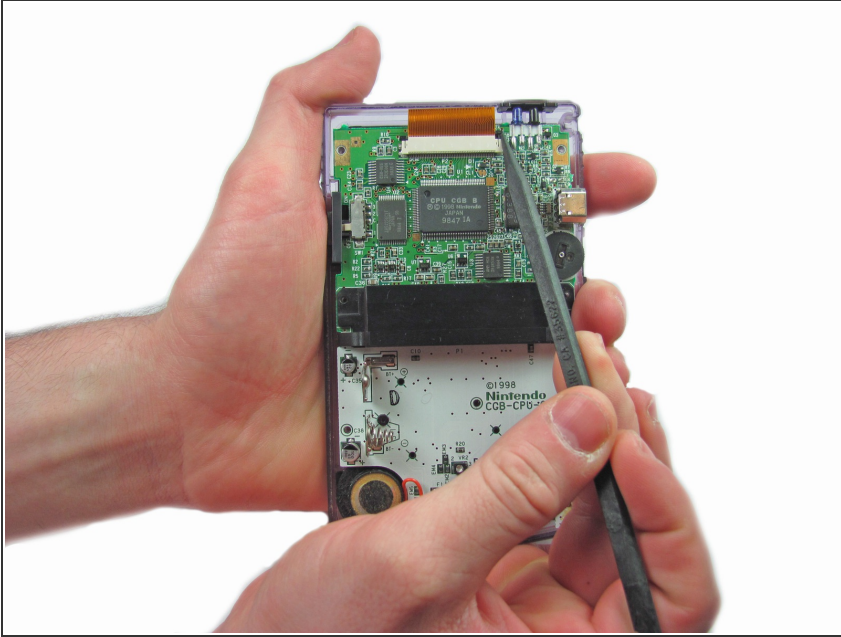

- Push up on the tabs on either side of the ribbon with a spudger.

## Step 6



- Gently remove the ribbon cable from the port

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-21 12:08:07 PM.